

# *Sunbeam* **iced**

## ICED COFFEE MACHINE

### User Guide

SDP1000 series



# Contents

<b>Sunbeam's Safety Precautions</b>	<b>1</b>
<b>Features of Iced Coffee Machine</b>	<b>2</b>
<b>Let's get you started</b>	<b>3</b>
<b>How to clean your Iced Coffee Machine</b>	<b>4</b>
<b>FAQ</b>	<b>5</b>

## Important instructions – retain for future use.

تأكد من تفهم احتياطات السلامة المذكورة اعلاه

請務必理解上述的安全預防措施。

Assurez-vous que les précautions ci-dessus relatives à la sécurité sont bien comprises

Versichern Sie sich, dass die obenstehenden Sicherheitsmaßnahmen Verstanden werden

Βεβαιώνετε πως οι παραπάνω προφυλάξεις ασφαλείας γίνονται κατανοητές

Pastikan bahwa tindakan-tindakan keselamatan seperti di atas dimengerti anda

Accertatevi che le suddette norme di sicurezza siano comprese a dovere

上記の注意事項をよくお読みになり、安全を御確認ください

Уверете се дека погоре споменатите мерки на претпазливост се добро разбрани

Asegúrese de que las precauciones de seguridad precedentes sean bien comprendidas

کاری یکنید که احتیاطهای بالا حتماً درک بشوند

ต้องแน่ใจว่า ข้อควรระวังเรื่องความปลอดภัยข้างต้น เป็นที่เข้าใจกันดี

Yukarda belirtilen güvenlik önlemlerinin anlaşıldığından emin olunuz

Xin kiểm chắc rằng những biện pháp làm an toàn kể trên được hiểu rõ

# Sunbeam's Safety Precautions

## FOR YOUR SUNBEAM ICED COFFEE MACHINE:

- Always place the unit on a flat, level surface.
- Do not place in a cabinet when in use.
- Do not operate without water in water reservoir. Fill water reservoir with filtered water. Observe the maximum filling volume.
- Do not allow the power cord to come into contact with the hot parts of the machine.
- Do not place hands directly under the brew spout as this can lead to a scalding or injury.
- The temperature of accessible surfaces may be high when the appliance is operating. Even after

use, the heating element surface is subject to residual heat after use.

- Always switch off and unplug at power outlet before cleaning the coffee machine.
- Children should not perform cleaning and user maintenance without supervision.
- Always switch off and unplug at power outlet if there is any problem during the coffee making process.
- Do not use an appliance for any purpose other than its intended use. Injury could occur from misuse.

---

**Sunbeam is very safety conscious when designing and manufacturing consumer products, but it is essential that the product user also exercise care when using an electrical appliance. Listed below are precautions which are essential for the safe use of an electrical appliance:**

- Read carefully and save all the instructions provided with an appliance.
- Always turn the power off at the power outlet before you insert or remove a plug. Remove by grasping the plug - do not pull on the cord.
- Turn the power off and remove the plug when the appliance is not in use and before cleaning.
- Do not use your appliance with an extension cord unless this cord has been checked and tested by a qualified technician or service person.
- Always use your appliance from a power outlet of the voltage (A.C. only) marked on the appliance.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- The temperature of accessible surfaces may be high when the appliance is operating.
- Never leave an appliance unattended while in use.

- Do not use an appliance for any purpose other than its intended use.
- Do not place an appliance on or near a hot gas flame, electric element or on a heated oven.
- Do not place on top of any other appliance.
- Do not let the power cord of an appliance hang over the edge of a table or bench top or touch any hot surface.
- Do not operate any electrical appliance with a damaged cord or after the appliance has been damaged in any manner. If damage is suspected, return the appliance to the nearest Sunbeam Appointed Service Centre for examination, repair or adjustment.
- For additional protection, Sunbeam recommend the use of a residual current device (RCD) with a tripping current not exceeding 30mA in the electrical circuit supplying power to your appliances.
- Do not immerse the appliance in water or any other liquid unless recommended.
- Appliances are not intended to be operated by means of an external timer or separate remote control system.
- This appliance is intended to be used in household and similar applications such as: staff kitchen areas in shops, offices and other working environments; farm houses; by clients in hotels, motels and other residential type environments; bed and breakfast type environments.

If you have any concerns regarding the performance and use of your appliance, please visit [www.sunbeam.com.au](http://www.sunbeam.com.au) or contact the Sunbeam Consumer Service Line. Ensure the above safety precautions are understood.

# Features of Iced Coffee Machine



**1. ON / OFF Button.**

**2. BREW Button.**

**3. Base & Water Reservoir.**

**4. Brew Spout**

**5. Lid**

**6. Reusable Coffee Filter.**

**7. Brew Basket.**

**8. No drip lever.**

**9. Scoop.**

**10. Reusable 650mL Tumbler.**

**11. Tumbler Straw**

**12. Tumbler Lid**

# Let's get you started

## Unpack your Iced Coffee Machine

1. Unpack your Iced Coffee Machine and remove plastic bags, cartons and any tape on the unit.

**IMPORTANT:** KEEP PLASTIC BAGS AWAY FROM CHILDREN.

## Clean Iced Coffee Machine before first use



**CAUTION:** To avoid potential damage to the unit, do not plug in machine without water in unit.

1. Wash the tumbler, lid, straw, coffee filter and brew basket in a mixture of mild detergent and water. Rinse each thoroughly.
2. Start with the unit unplugged. Fill tumbler with filtered water to the water line and pour into reservoir. Place brew basket in position and reusable coffee filter into brew basket. Slide the No Drip Lever to the open position.
3. Place tumbler under drip spout and plug in. Switch on the unit at the rear and press the BREW button. Ensure the LED is illuminated.
4. When the cycle is complete and the machine has been fully flushed, discard the water from the tumbler and rinse thoroughly with clean water.
5. Your Iced Coffee Machine is now ready for use.

## Let's Make Iced Coffee!

1. Start with the unit unplugged.  
**WARNING:** To prevent injury from hot steam or potential damage to the unit, do not plug the unit in until the water is in the reservoir and the tumbler is put in place under the drip spout (Step 9).
2. Fill the tumbler ⑩ to the "WATER" marking with filtered water.
3. Lift the lid ⑤ of the unit and remove the brew basket portion ⑦, exposing the water reservoir.
4. Pour the water into the reservoir ③.  
**NOTE:** Never fill water reservoir above MAX fill line.
5. Place the brew basket back on top of the reservoir. Place the reusable coffee filter ⑥ into the brew basket.
6. Slide No Drip Lever to open ⑧.



7. Using the coffee scoop ⑨, pour 1 level scoop of grounds into the reusable coffee filter. Close the lid.  
**NOTE:** If you want a bolder cup of iced coffee, you can use 1½ - 2 scoops of grounds.
8. Fill the tumbler with large ice cubes to the "ICE" marking.
9. Place tumbler under drip spout and plug unit in. Switch on the unit at the rear and press the "BREW" button ②. Ensure the LED is illuminated.
10. Wait 3-4 minutes for brewing to complete. Once dripping slows and stops, slide the No Drip Lever to closed to stop the flow of coffee.



11. Add in your favorite coffee mix-ins for coffee just how you like it.
12. Insert straw ⑪ in lid ⑫, place lid on tumbler and enjoy!

# How to clean your Iced Coffee Machine

Minerals (like calcium and limestone) found in water can leave deposits in your Iced Coffee Machine and affect its performance. Decalcifying your iced coffee machine is an important part of ensuring your coffee always tastes great! We recommend decalcifying your Iced Coffee Machine once per month to keep it at peak performance. It's an easy process – see below:

1. Prepare 1 cup (235ml) of undiluted, white household vinegar. Pour the vinegar into the water reservoir.
2. Place the reusable coffee filter into the brew basket and close the lid.
3. Place the tumbler under the spout and press the BREW button to run a brew cycle.
4. Once the iced coffee machine has shut off, discard the contents of the tumbler. Remove the reusable coffee filter from the brew basket.
5. Rinse out the tumbler, reusable coffee filter and brew basket with clean water.
6. Fill tumbler to “WATER” marking with clean water and pour water into the water reservoir.
7. Place tumbler under spout and press “BREW” button to run a brew cycle.
8. Discard water and rinse tumbler thoroughly with clean water.
9. Repeat steps 6-8 one more time, to ensure the iced coffee machine is thoroughly rinsed.

Your iced coffee machine is now clean and ready to brew delicious iced coffee whenever you need a pick-me-up!

## **DISHWASHER SAFE PARTS OF YOUR ICED COFFEE MACHINE**

To thoroughly clean your iced coffee machine, you can put the following parts into the top-rack of the dishwasher:

1. Reusable coffee filter

**CAUTION:** THE ELECTRICAL BASE, POWER CORD AND PLUG ARE NOT DISHWASHER SAFE AND SHOULD NEVER BE IMMERSSED IN WATER OR OTHER LIQUIDS.

# FAQ

## **How does it work?**

The Iced Coffee Machine brews hot concentrated coffee directly over ice to ensure the freshest flavour. By using just the right amount of coffee, water and ice, the iced coffee still tastes great even as the ice melts. Iced coffee, brewed to perfection.

## **My iced coffee is not strong enough for my taste – how do I make stronger iced coffee?**

No problem – everyone’s tastes are different! Add another half scoop of coffee grounds into the reusable coffee filter next time you make iced coffee. If that’s still not strong enough, try a full extra scoop. Add until you find the perfect ratio for you!

## **Is the tumbler dishwasher safe?**

No, tumbler lid and straw should be hand-washed only.

## **Why is there no ice left in my cup after I brew my iced coffee?**

Try using bigger ice cubes when making your iced coffee – these will melt slower and give you ice in your drink for longer! Also, ensure you have filled the tumbler to the ice marking.

## **Why doesn't the iced coffee machine fill the tumbler with iced coffee to the top?**

We know many people like to customize their coffee beverages. For this reason, we designed the machine to leave a little extra room for milks, cream, sugar or syrups! However, for a more full tumbler, you can fill the water reservoir to the “MAX FILL” line.

## **Can I use a different tumbler / cup for making iced coffee?**

Sure! Most cups should fit underneath the spout of the iced coffee machine – just ensure you keep the same ratio of water-grounds-ice to create the best tasting iced coffee!

## **Why isn't the coffee dispensing into my tumbler?**

The No Drip Lever might be set to closed ☒. Slide the No Drip Lever over to open ☐ and your coffee will flow through.

## **Why are there grounds in my iced coffee?**

You may have over-filled your reusable coffee filter with grounds and they could have spilled over the top. Although this is uncommon, try using a little less grounds next time and that will solve your grounds issue!

## **How do I turn my iced coffee machine off?**

The iced coffee machine will turn off on its own after the brewing cycle has completed. If you would like to pause or stop the brewing cycle you can switch the unit off at the rear using the On/Off button ①.

# 12 Month Replacement Guarantee

This Sunbeam product is covered by a 12 month replacement or repair warranty, which is in addition to your rights under the Australian Consumer Law (if your product was purchased in Australia) or New Zealand Consumer Guarantees Act (if your product was purchased in New Zealand).

Upon receipt of your claim, Sunbeam will seek to resolve your difficulties or, if the product is defective, advise you on how to obtain a replacement or refund.

To assist us in managing warranty claims, we recommend you register your product as soon as practicable after purchase, on our Sunbeam website and uploading a copy of your original receipt. View the Support section of the Sunbeam website.

In order to make a claim under our warranty, you must have the original proof of purchase documentation for the product and present it when requested (if not already uploaded to our website).

Should your product develop any defect within 12 months of purchase because of faulty materials or workmanship, we will replace or repair it, at our discretion, free of charge. A product presented for repair may be replaced by a refurbished product of the same type rather than being repaired. Refurbished parts may be used to repair the product.

Our replacement or repair warranty only applies where a defect arises as a result of faulty material or workmanship during the warranty period. Your warranty does not cover misuse or negligent handling (including damage caused by failing to use the product in accordance with this instruction booklet), accidental damage, or normal wear and tear.

Your warranty does not:

- cover freight or any other costs incurred in making a claim, consumable items, accessories that by their nature and limited lifespan require periodic renewal (such as filters and seals) or any consequential loss or damage; or
- cover damage caused by:
  - power surges, power dips, voltage supply problems, or use of the product on incorrect voltage;

- servicing or modification of the product other than by Sunbeam or an authorised Sunbeam service centre;
- use of the product with other accessories, attachments, product supplies, parts or devices that do not conform to Sunbeam specifications; or
- exposure of the product to abnormally corrosive conditions; or

- extend beyond 3 months if the product is used in commercial, industrial, educational or rental applications.

**The benefits given to you by our warranty are in addition to other rights and remedies under law in relation to the product.**

**In Australia our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.**

**Our goods also come with guarantees that cannot be excluded under the New Zealand Consumer Guarantees Act.**

If your warranty claim is not accepted, we will inform you and if requested to do so by you, repair the product provided you pay the usual charges for such repair. You will also be responsible for all freight and other costs.

Should your product require repair or service after the warranty period, contact your nearest Sunbeam service centre. For a complete list of Sunbeam's service centres, visit our website or call our customer service line for advice on 1300 881 861 in Australia, or 0800 786 232 in New Zealand.

Should you experience any difficulties with your product during the warranty period, please contact our customer service line for advice on 1300 881 861 in Australia, or 0800 786 232 in New Zealand.

---

## Australia

[www.sunbeam.com.au](http://www.sunbeam.com.au)  
1300 881 861

## New Zealand

[www.sunbeam.co.nz](http://www.sunbeam.co.nz)  
0800 786 232

---



## **Need help with your appliance?**

Contact our customer service team or visit our website for information and tips on getting the most from your appliance.

Australia | visit [www.sunbeam.com.au](http://www.sunbeam.com.au)  
phone 1300 881 861

New Zealand | visit [www.sunbeam.co.nz](http://www.sunbeam.co.nz)  
phone 0800 786 232

Newell Australia Pty Ltd. ABN 68 075 071 233

Sunbeam is a registered trade mark.

Made in China to Sunbeam's specification.

Due to minor changes in design or otherwise,

the product you buy may differ slightly from the one shown here.

Approved by the appropriate electrical regulatory authorities.

©Copyright Sunbeam 2022.

06/22

SDP1000BK\_22EM1 (ANZ)\_GCDS-JC

PN: NWL0001451444

SAP: SDP1000BK